



## INSTALLATION GUIDE


1

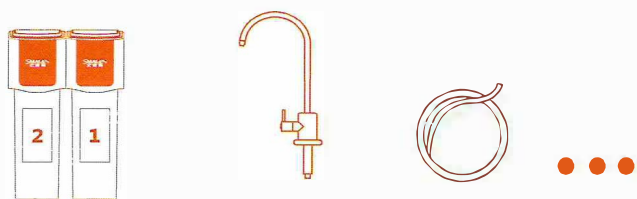

2

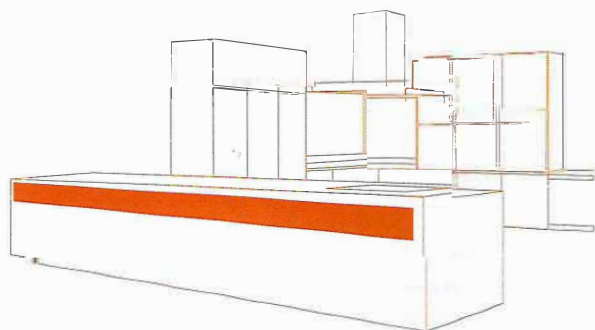


3

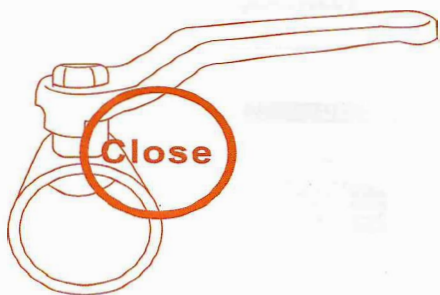

Please close the entrance water valve before installation

## INSTALLATION STEPS

1

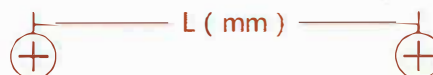

Corresponding to the remarks of the whole machine model, mark the position of the nail, install the rack (can be adjusted according to the actual situation)

### Remark


SMS-F02 wall base screw distance is  $L = 160\text{mm}$

2



Take out the PE pipe and stainless steel integrated valve, and cut the PE pipe into two flat pipes.  
(The length of the cut PE pipe depends on the actual situation)

3

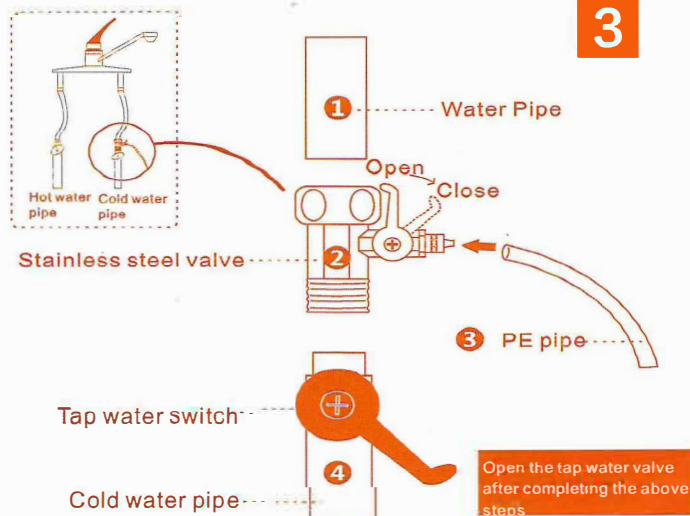



## BASIC PARAMETERS

|                           |               |
|---------------------------|---------------|
| Model                     | SS-F02        |
| Pure Water Flow           | 210L/H        |
| Total                     | 2000L         |
| Applicable Water Pressure | 0.1~0.4MPa    |
| Working Temperature       | 5~38°C        |
| Applicable Water Quality  | Tap water     |
| Product Size              | 200x105x340mm |

## PACKING LIST

|             |                           |          |
|-------------|---------------------------|----------|
| Main body   | SMS-F02                   |          |
| Accessories | 1/4" PE pipe              | 3 meters |
|             | Expanded rubber particles | 5pcs     |
|             | Stainless steel valve     | 1pcs     |
|             | Faucet                    | 1set     |
|             | Screw                     | 5pcs     |
|             | Faucet hanger             | 1pcs     |
|             | User manual               | 1pcs     |
|             | Warranty                  | 1pcs     |

## PARTS SKETCH MAP

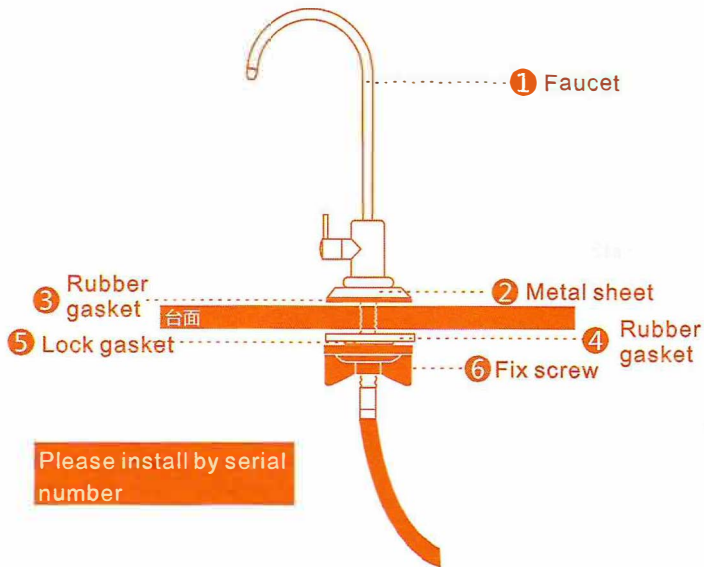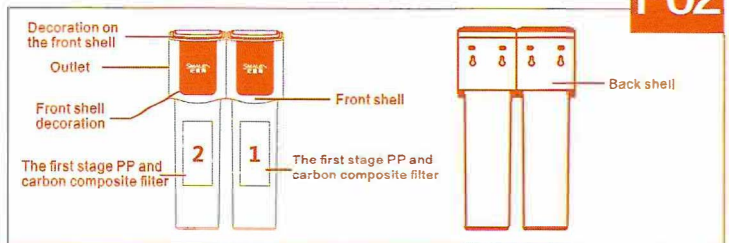

Please install by serial number

The Installation Diagram Of The Whole Machine Is As Follows

SMS-F02

